The following catalog has gaps in its page numbers, or doesn't have any numbers. We have chosen to leave the page numbering in the order that Acrobat assigns it.



PARTS CATALOG


This catalog applies to the standard DLA plants as listed below. The DLA is powered by a Lister Blackstone engine (See Lister Blackstone Manual). Onan parts are arranged in groups of related items and are identified by a reference. All parts illustrations are typical. Using the Model and Spec No. from the Onan plant nameplate, select Parts Key No. (1, 2, etc., in the last column) that applies to your plant Model and Spec No. This Parts Key No. represents parts that differ between models. Unless otherwise mentioned, parts are interchangeable. Right and left plant sides are determined by facing the front end of the engine.

PLANT DATA TABLE

MODEL AND SPEC NO. *	ELE	PARTS		
	WATTS	VOLTS	CYCLES	KEY NO.
205DLA-IM/	2500	120	60	ı
205DLA-3M/	2500	120/240	60	2
205DLA-232E/	2500	32 DC		3
205DLA-1E4/	2500	120 AC 32 DC	60	4
205DLA-3E4/	2500	120/240 AC 32 DC	(0	5


^{* -} The Specification Letter advances (A to B, B to C, etc.) with manufacturing changes.



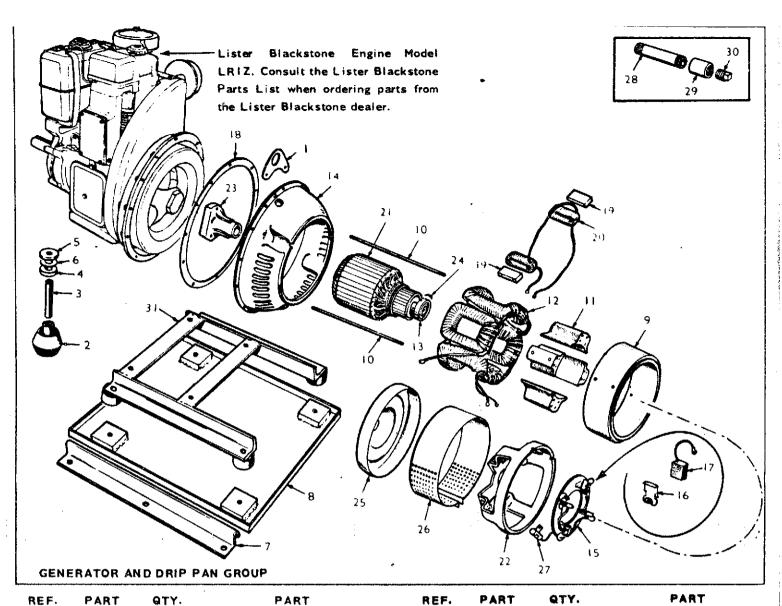

NO.	PART NO.	USED	PART DESCRIPTION	REF.	NO.	USED	
1	403A780		Bracket, Lifting	- 1	212B2%	1	Key 2
2	CUSHION.	, MOUNT!	_	I.	212C244	1	Key 3
	402B285	2	Generator End		212C314	1	Key 4
	402B284	2	Engine End	ı	212C315	1	Key 5
3	402A328	4	Bushing, Mtg. Spacer	16	SPRING, B	ARUSH	
4	402A282	4	Snubber, Shock Mtg.	i	212B1105	·, 8	Key 1, 4
5	526-14	4	Washer (29/64" I.D. x I+1/2"	ı	21281105	7	Key 2, 5
			O.D. x 1/8")	ı	212A1106	4	Key 3
6	526-198	8	Washer (5/8" I.D. x I-1/2"	17	BRUSH		
			O.D. x 1/16")		214A50	4	Collector Ring (AC) Key 1, 4
. 7	405B1265	2	Clamp, Holddown		214A50		Collector Ring (AC) Key 2, 5
8	405B1577	ŀ	Pan, Drip	į.	214A61		Commutator (DC) Key 1, 2
9	FRAME, G	ENERAT	·		214A68		Commutator (DC) Key 3
	210C243		Key, 1, 2		214A83		Commutator (DC) Key 4, 5
	2100389	1	Key 3	18	231B133		
	210D390	ł	Key 4, 5	19	221A129		Shoe, Interpole - Key 3
10		NERATO	DR THROUGH	20	222A530	1	Coil Assy., Interpole - Key 3
	520A337	2	Key 1, 2	21	ARMATUR		BLY (Incl. Brg.)
	520A329	2	Key 3		201-1402		Key İ
	520A502	2	Key 4, 5		201-1404		Key 2
11	SHOE, POL		1.27		201-1397		Key 3
	221A86	4	Key 1, 2		201-1406		Key 4
	221B126	4	Key 3		201-1407		Key 5
	221A91	4	Key 4, 5	22	BELL, EN		,
12			(4 Coils Wired Together)		211D98		Key 2, 5
	222-1638	1	Key 1, 2		211097		Key 1, 3, 4
	222-1662	ļ	Key 3	23	232B1835		Hub, Gen. Drive
	222-1666	1	Key 4, 5	24	232A596		Clip, Bearing Stop
13	510A47	1	Bearing, Ball	25	211C99		Cover, End Bell
14	2310129	1	Adapter, Generator	26	BAND, EN		· ·
- IS		RRUSH	(Incl. Brushes & Sprgs.)	-	234C5		Key 1, 3, 5
TITTIN'S	217/294	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Key I 5		234C2	, Re	edistribution or publication of this documer
	Generati	IOII	Δ5				any means, is strictly prohibited.

41	CONDENSI	t. K		ì	312A27	3	Key 3 (.5 Mfd.)
	312A17	1	Key I, 2 (.5 Mfd.)		312A27	2	Key 5 (.5 Mfd.)
	312A17	2	Key 4 (.5 Mfd.)	28	505-76	1	Nipple, Oil Drain (Eng.)
	312A58	2	Key 2 (.1 Mfd.)	29	505-28	ļ	Coupling, Oil Drain (Eng.)
	312A58	3	Key 5 (.1 Mfd.)	30	505-110	1	Plug, Oil Drain (Eng.)
	312A58	i	Key 1, 4 (.1 Mfd.)	31	403C778	1	Base, Mounting

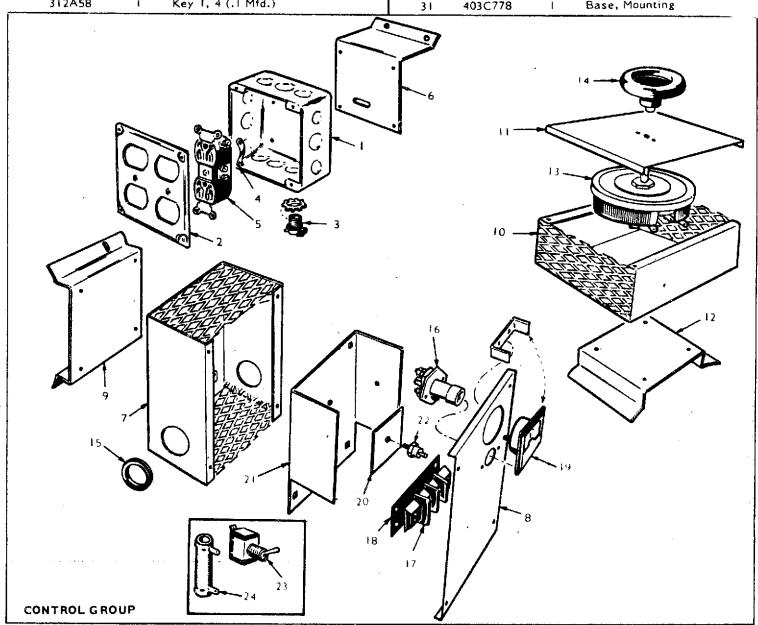

REF.	PART	QTY.	PART
NO.	NO.	USED	DESCRIPTIONS
1	330-28	ı	Box, Receptacle - Key 1, 2
2	330-42		Cover, Recept. Box - Key 1, 2
3	331-27	ĺ	Connector, Recept. Box - Key 1,2
- 4	160A144	. 2	Jumper, Recept. Grd Key I.
		,	2, 4, 5
5	RECEPTA	CLE, Du	IPLEX
	323 P 84	2	Key I, 4 (2 parallel Blades &
			Grounding pin)
	323P184	1	Key 2,5 (2 parallel Blades &
			Grounding pin)
	323 P2 I 3	1	Key 2, 5 (2 Tandem Blades &
			Grounding pin)
6	BRACKET	, RECEP	TACLE BOX MOUNTING
	301 C 1277	I	Key i
	301 C2683	1	Key 2
7	301C2715	!	Box, Control - Key 3, 4, 5
8	COVER CO	NTROL	BOX
	301A2716	1	Key 3
	30182717	1	Key 4, 5
9	301C2718	1	Bracket, Cont. Box Mtg Key
in	Powe	19"	3, 4, 5
Christian	301C2713	ration	Box, Rheostat - Key 3
	Gene	1001011	ΔA
			<u>nu</u>

REF. NO.	PART NO.	QTY. USED	
	301B2291	1	Cover, Rheo. Box - Key 3
12	301B2719	l	Bracket, Rheo. Box Mtg Key 3
13	303-10	1	Rheostat, Key 3
14	303-47	1	Knob, Rheostat - Key 3
15	870-192	4	Grommet, plastic - Key 3, 4, 5
16	308A28	1	Switch, Start - Key 3, 4, 5
17	BLOCK, TE	RMINAL	
	332A747	1	Key 3
	332A231	1	Key 4, 5
18	332A571	1	Strip, Block Marker - Key 4, 5
19	AMMETER		
	302A64	1	Key 3
	302A61	1	Key 4, 5
20	363A22	1	Plate, Heat Sink - Key 3
21	363B21	l	Sink, Heat - Rectifier - Key 3, 4, 5
22	RECTIFIER		., •
	358A10	F	Key 3
	305 P3 18		Key 4, 5
23	308-7	ł	Switch, Hi-Lo Charge - Key 4.5
24	304A45	ı Re	edistribution of publication of this declymer any means, is strictly prohibited.